 


18-UP JEEP JL 0-4.5" LIFT ADJUSTABLE REAR LOWER CONTROL ARM KIT (DRIVER & PASSENGER)

raptorseries
OFFROAD & PERFORMANCE

Components:



Rear Lower Control Arm
Driver Side
Qty 1



Rear Lower Control Arm
Passenger Side
Qty 1

Tools Required:

- Hydraulic Jack/Jack Stands
- Torque Wrench
- Tape Measure
- Anti-Seize Lubricant
- 21 MM Socket/Wrench
- 21 MM Open-End Wrench
- Angle Finder

Safety Warning:

Aftermarket suspension systems or components may cause your vehicle to handle differently than it would with factory components. Please use caution to prevent loss of control or vehicle rollover during quick sharp turns and other sudden maneuvers. Thoroughly inspect vehicle suspension and components before and after every off-road use.

Raptor Series Off-Road recommends the use of your Factory Service Manual for disassembly and assembly of factory and related components. Tighten all bolts and hardware to factory torque specifications unless otherwise specified in this instruction.

INSTRUCTIONS:

1. Remove Original Lower Control Arms

Begin by raising and supporting the vehicle using a hydraulic jack and jack stands.

Raise the rear axle housing back into normal ride height position ensuring that the axle housing is supported evenly. Attempting to remove or install control arms with the axle drooped or the suspension extended will cause tension on control arm hardware.

Remove the bolts and nuts attaching the control arm to the axle housing as well as the vehicle frame using a 21MM Socket/Wrench and 21MM Open-End Wrench. Retain this hardware to be used for installation.

Once these bolts have been removed, you may remove the original control arm from the vehicle. Complete installation of one side before continuing to the other.

2. Set Control Arm Length

Do to many variances in vehicle manufacturing and individual suspension components, we do not offer predetermined arm lengths. To make adjustments, spin the joint to increase or decrease the control arm length.

To determine the appropriate arm length for your application, you will need to take the following factors into consideration. Note that factory arm length is 19-3/4".

- Steering Clearance
- Tire Clearance
- Pinion Angle/ Caster
- Axle Position

3. Install Adjustable Control Arms

The Adjustable Rear Lower Control Arms should be positioned to where the fixed end will mount to the frame mount while the adjustable end will be attached to the axle.

Apply anti-seize lubricant to bolt threads of original mounting hardware. Hand tighten the original hardware to mount each end of the control arms (3a).

Once both control arms have been properly installed, lower the vehicle to the ground until the coil springs are supporting the full weight of the vehicle.

Using a torque wrench, tighten all mounting hardware to 90 ft lbs. Tighten jam nuts using Crescent wrench or equivalent.

4. Post Installation

It is necessary to have a professional wheel alignment performed by a certified technician to ensure the vehicle is aligned to factory specifications.

Upon completion of installation and within 500 miles of driving, it is necessary to check and ensure all hardware is properly torqued to factory specifications as noted in the factory service manual or as specified in this instruction.

