

0101-0046C

99-10 Silverado/Sierra 1500/2500 LD Ext Cab
01-10 Silverado/Sierra 2500/3500 HD Ext Cab

Components List:

- 2 – Stainless steel step bars. Passenger/Driver
- 2 – Brackets, Front.
- 2 – Brackets, Center.
- 2 – Brackets, Rear.

Parts List:

- 6 – M12-1.75 x 120 mm hex head bolts
- 6 – M12 flat washers
- 6 – M12 lock washers
- 2 – M10 x 25 mm hex head bolts
- 2 – M10 flat washers
- 2 – M10 lock washers
- 4 – M14 hex head bolt
- 4 – M14 flat washers
- 4 – M14 lock washers
- 4 – 1.88" OD spacer


Installation Instruction:

1. Remove contents from box and check for damage. Verify all the parts from the list above are present and accounted for. Please read instructions completely before starting.
2. Remove driver side body mount bolts located under cab of vehicle. Keep existing washer and rubber bushing in place. Attach front bracket as shown.

Note: From 06'-UP trucks, using existing factory body mount bolts to attach brackets to the vehicle. For all other applications, using M12 x 120 mm bolt set provided and discard the factory body mount bolts.

3. Attach center brackets with two 1.88 O.D. spacer washers between bracket and existing rubber bushing and washer. Attach rear bracket as shown.
4. Attach step bar to brackets using M14 bolt set and M10 bolt set as shown. Make sure step bar is properly aligned with vehicle.
5. Repeat installation for passenger side.

0101-0046C

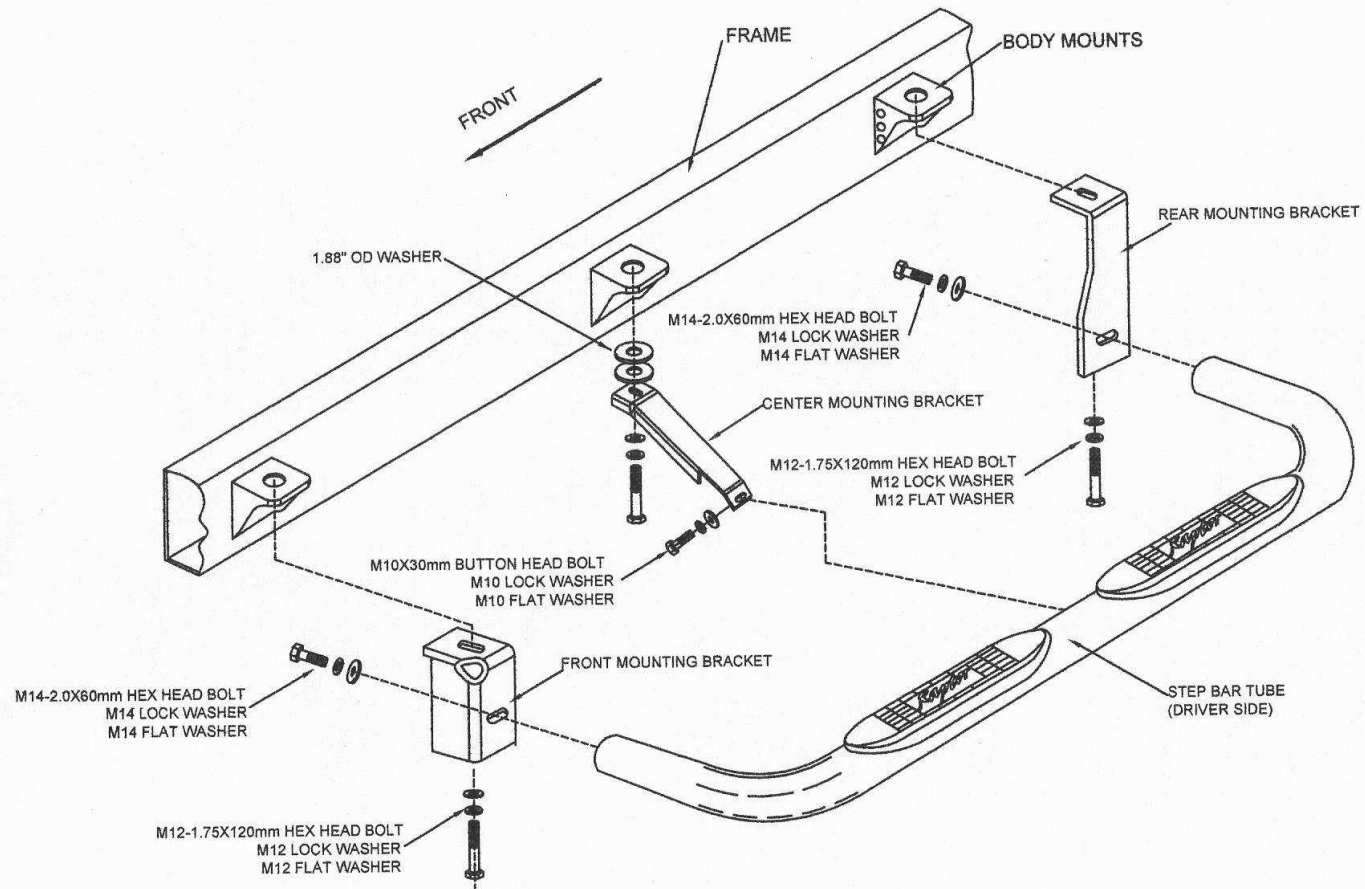

INSTALLATION VIEW OF DRIVER SIDE , PASSENGER SIDE OPPOSITE