

# Installation Instruction

## Model : 0102-0676M

Item No.	Part Number	Part Description	QTY
1	0102-0676M-01	Stainless steel 3" step bars	2
2	0102-0676M-02	Driver Side Front Bracket	1
3	0102-0676M-03	Passenger Side Front Bracket	1
4	0102-0676M-04	Driver & Passenger Side Rear Bracket	2
5	0102-0676M-05	Driver & Passenger Side Front Support Brace	2
6	0102-0676M-06	M12 Bolt + M10 Nut Plate	4
7	0102-0676M-07	M12 Bolt Plate	2
8	0102-0676M-08	Plastic Retainer	6
9	0102-0676M-09	M12 Flat Washer	6
10	0102-0676M-10	M12 Lock Washer	6
11	0102-0676M-11	M12 Hex Nut	6
12	0102-0676M-12	M10 x 35 mm Bolt	4
13	0102-0676M-13	M10 Flat Washer	4
14	0102-0676M-14	M10 Lock Washer	4
15	0102-0676M-15	M14 Hex Bolt	4
16	0102-0676M-16	M14 Flat Washer	4
17	0102-0676M-17	M14 Lock Washer	4

STEP 1. Remove all contents from bracket box and check for quantity and any damaged parts.

STEP 2. Start at passenger side. Remove the tape that covers the front running board holes. This is located at the inner rocker panel behind the front tires.

STEP 3. Partially thread plastic retainer to bolt + nut plate. Then place the bolt+ nut plate trough the slot with the two smaller holes below. Tighten the plastic retainer so the bolt plate is secure. (Fig. 1)

STEP 4. Partially thread plastic retainer to bolt plate. Then insert it into the most frontal slot. Tighten the plastic retainer so the bolt plate is secure. (Fig. 1)

STEP 5. Attach the passenger side front bracket to the installed bolt plate using M12 flat washer, lock washers and M12 hex nuts.

STEP 6. Rotate the bolt + nut plate so the nut side of the plate lines up with the rocker panel hole, and bracket slot. Insert M10 bolt with M10 flat washer and lock washer to secure the bracket. (Fig. 2)

STEP 7. Unscrew the truck body mount bolt located the left of bracket. Attached front support brace between the truck body mount and front bracket bolt assembly. (fig. 2)

STEP 8. Remove the tape located at the rearmost running board holes. Thread plastic retainer to bolt + nut plate. Insert the bolt plate into the slot. Tighten the retainer so the bolt plate is secured. (Fig. 3)

STEP 9. Attach the passenger side rear bracket using M12 flat washer, lock washer and M12 hex nut. (Fig. 4)

STEP 10. Rotate the bolt +nut plate so the nut side of the plate lines up with the lower hole and the slot in the bracket. Using M10 bolt, flat and lock washer to secure the bracket. (Fig. 4)

STEP 11. Attach he passenger side bar to front and rear bracket secure with M14 blot, flat and lock washer.

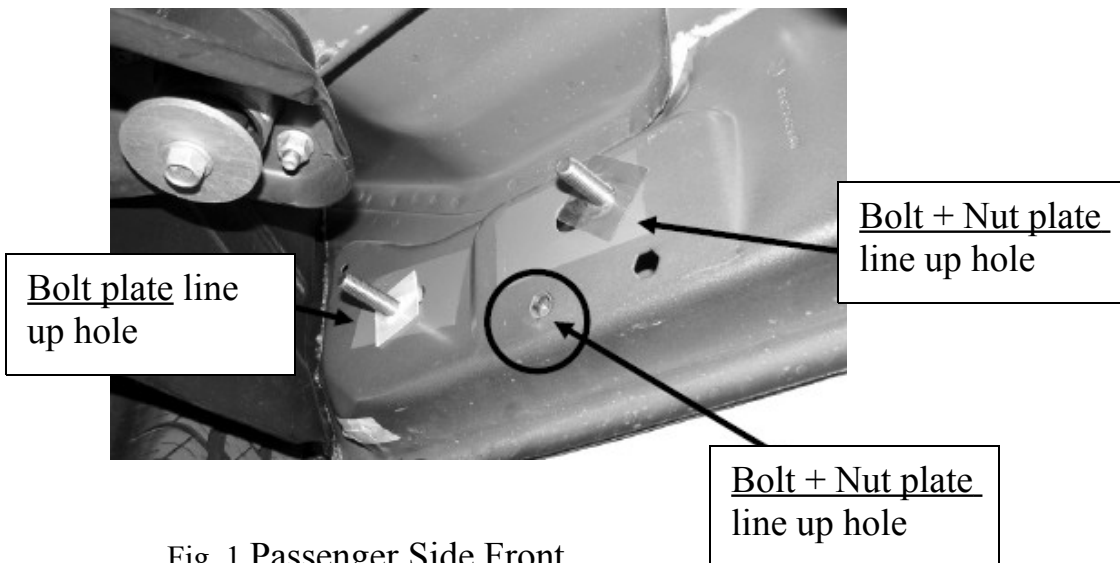


Fig. 1 Passenger Side Front

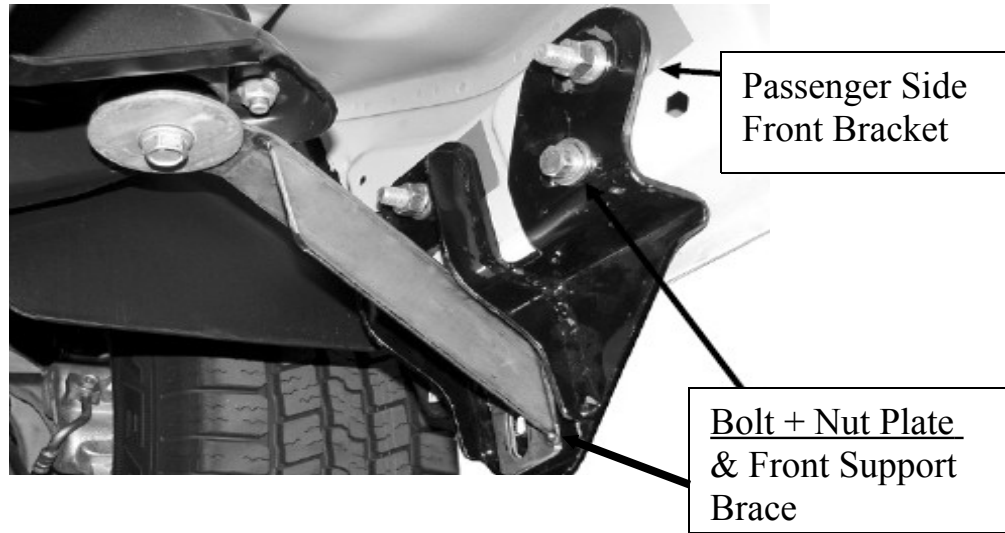


Fig. 2 Passenger Side Front Bracket & Support Brace

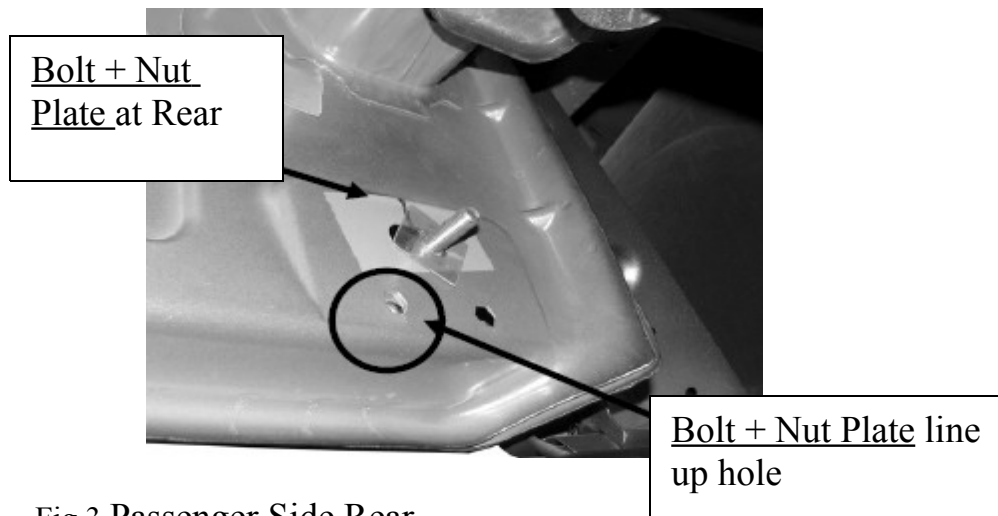


Fig.3 Passenger Side Rear

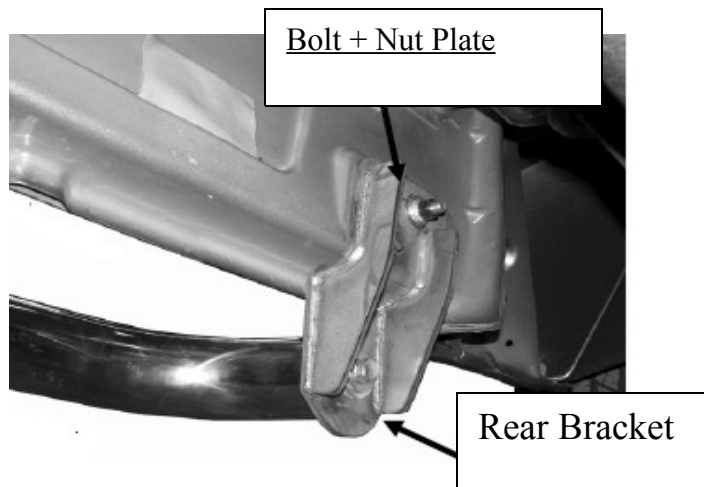


Fig.4 Passenger Side Rear Bracket